

## Battery Save features on your Voyager Cordless Phones

Your Voyager phone comes with many user programmable features.  
Page 16 **voyager user manual** is a quick guide to selecting these features.

Switch the phone **ON**, *standby mode*  
Push **Menu key** (scr/menu)

Use the **up** and **down** arrow **keys** to navigate the columns. First column functions

Follow down the first column till you reach the desired area 5 **Select**

Push the Green **OK key** to select this program area.

Reading down the second column of this area is:

(1) **Saving Mode**. This is normally set to *inactive* but can be activated to provide:

- a) **key lock** - so you don't inadvertently bump keys while you are working.
- b) **power saving** - this mode also provides considerable **power saving**, by turning off the display while the phone is in standby mode (in your pocket)

On an *incoming call* - the phone will immediately wake up and ring.

To make an *outside call*, simply press **OK** button **twice**. (not to fast)

(5) **Power level** This can be set *High, Low, or Auto*. Your Voyager phone has plenty of power to allow you to operate in difficult reception areas, however it is not always necessary to have the power on High all the time.

A general walk test to identify difficult reception areas will allow you to test out different settings. The *low power* setting will still let you work in most areas, if not all. You need to try this out at your location. A 40 % power saving can be achieved with *low power* setting and *save mode* thus increasing battery time dramatically.

The **auto setting** will remain on low until it detects *low (rf) signal range* and then automatically increase to the high setting. Select the best option for your situation. After selection push **OK to save**

Push **C key (red)** to back out of menu(s) and back to standby mode.